


195
END TABLE

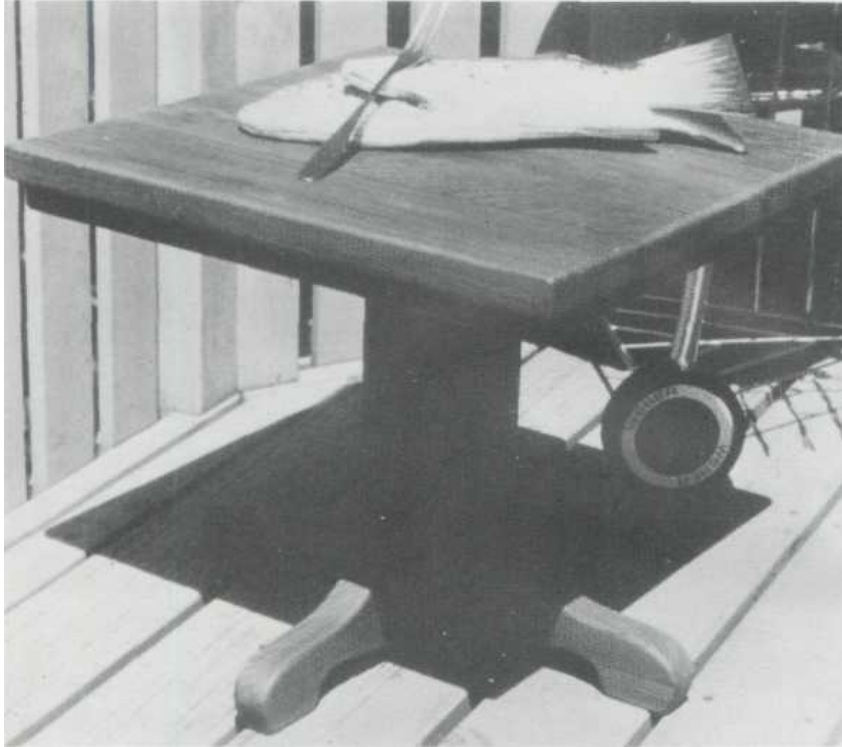

This table will add beauty and convenience to any setting, indoors or out. The one shown here was made of redwood and assembled with waterproof fasteners. However, you can use the wood of your choice with conventional fasteners to create a lovely piece of indoor furniture. Adjust the column height and top dimensions to suit your tastes.

1. Cut the pieces to size according to the dimensions provided. Use the pattern to make a template for the feet (E).

2. Glue and screw or nail one edge of the column sides (A) at a time until the column is complete. Check for squareness.

3. Glue up the top (B) from 2 x 8 or narrower stock. After the glue dries, sand the panel flat and cut it to 21-1/2" square. Round over all sharp edges.

4. Cut 45° miters on the ends of the apron pieces (D). Center the pieces on the underside of the top, and drive #10 x 2-1/2" screws from underneath the apron into the top to secure.

5. Center the top bracket (C) on the column, and glue and screw it in place.

6. Center the top/apron assembly on the column, gluing and screwing from underneath through the top bracket.

7. Attach the feet to the column using hanger bolts and nuts.

8. Sand and finish as desired.

LIST OF MATERIALS

(finished dimensions in inches)

| | | |
|----------|--------------------------------------|-------------------------|
| A | Column sides (4) | 3/4 x 3-1/2 x 16 |
| B | Top | 1-1/2 x 21-1/2 x 21-1/2 |
| C | Top bracket | 3/4 x 7-1/4 x 7-1/4 |
| D | Apron (4) | 1-1/2 x 3-1/2 x 20-1/4 |
| E | Feet (4) | 1-1/2 x 5-1/2 x 8-1/2 |
| | Hanger bolts, nuts, and lock washers | 1/4 dia. x 2-1/2 |
| | Wood screws | #10 x 2-1/2 |
| | Wood screws | #8 x 1-1/2 |
| | 3d finishing nails | |
| | Wood glue | |

