




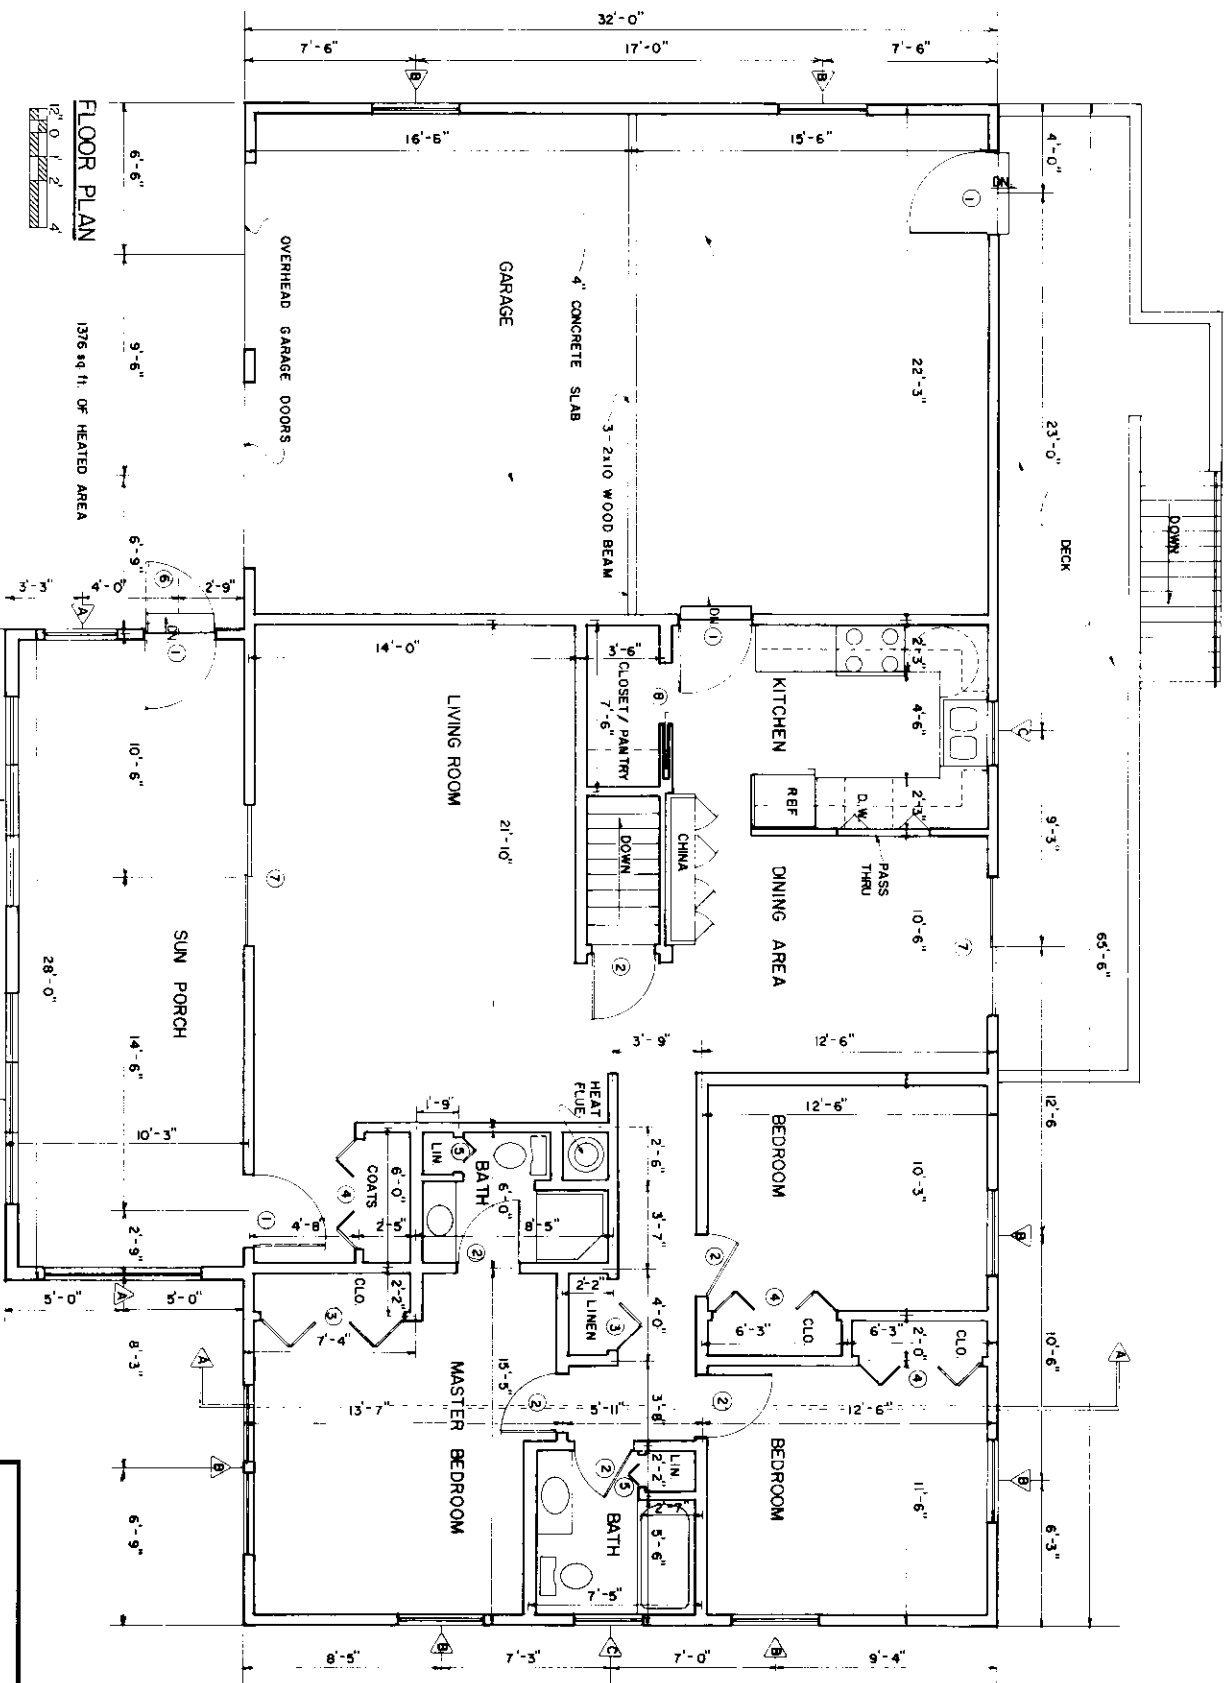

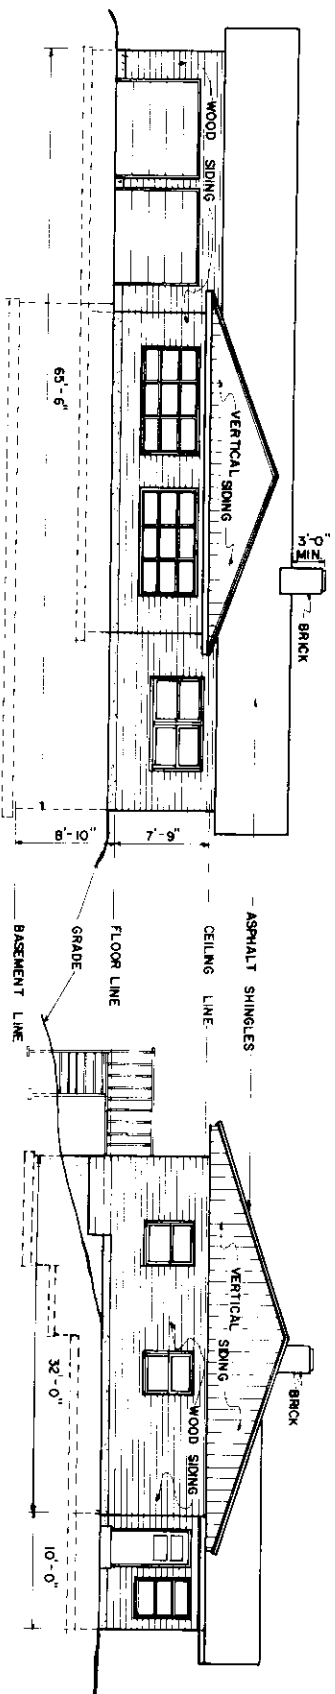

FRONT ELEVATION $\frac{1}{20} \text{\"}$ = $\frac{1}{4} \text{\"}$


LEFT SIDE ELEVATION $\frac{1}{20} \text{\"}$ = $\frac{1}{4} \text{\"}$

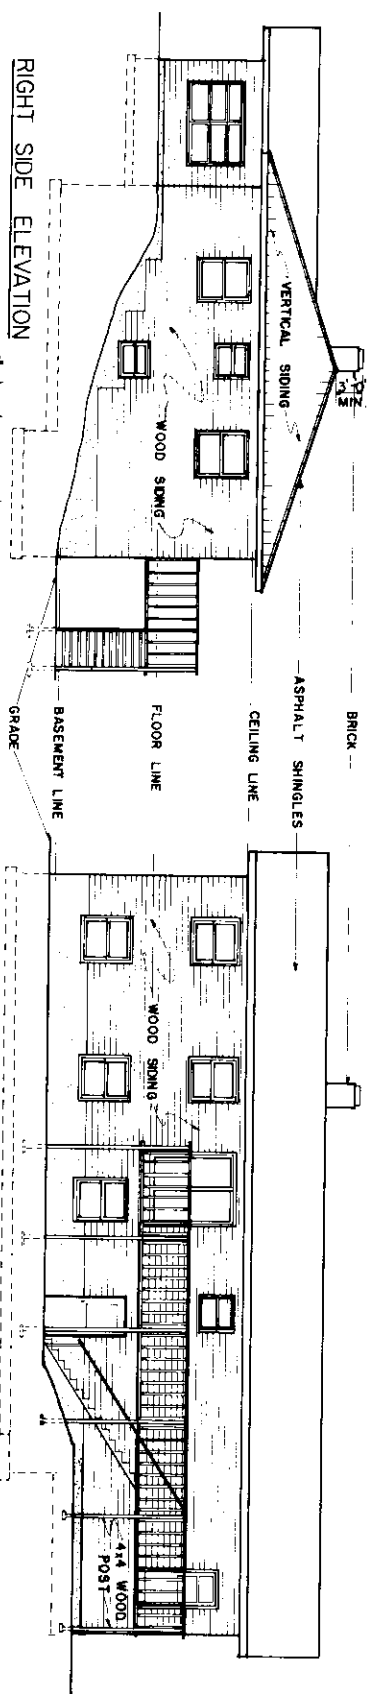

RIGHT SIDE ELEVATION $\frac{1}{20} \text{\"}$ = $\frac{1}{4} \text{\"}$

BACK ELEVATION $\frac{1}{20} \text{\"}$ = $\frac{1}{4} \text{\"}$

SCALE $\frac{1}{8} \text{\"}$ = $1 \text{'-} 0 \text{'}$

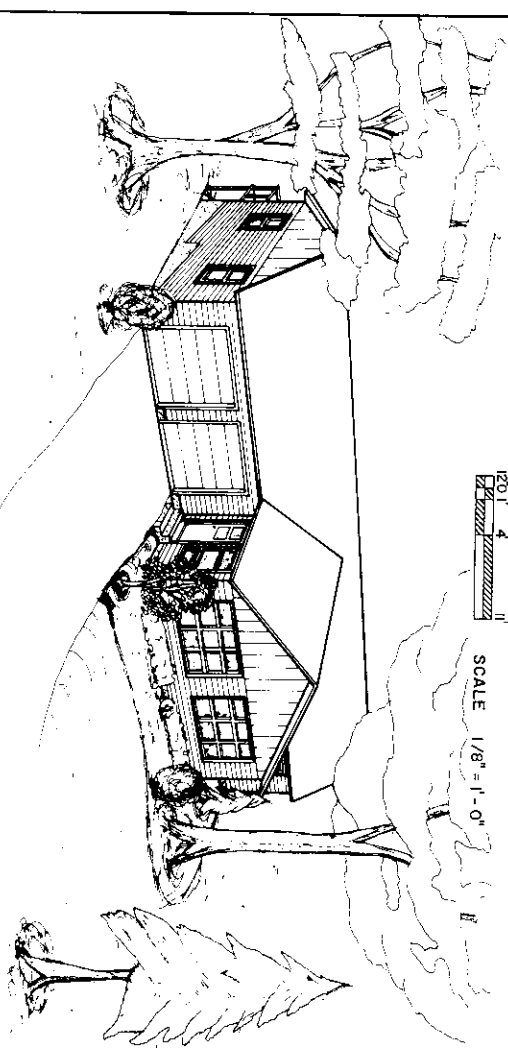


PERSPECTIVE VIEW
(NOT TO SCALE)

COOPERATIVE EXTENSION SERVICE
AGRICULTURE AND HOME ECONOMICS


UNITED STATES DEPARTMENT OF AGRICULTURE COOPERATING

3 BEDROOM FARMHOUSE


USDA 85 7260 SHEET 2 OF 3

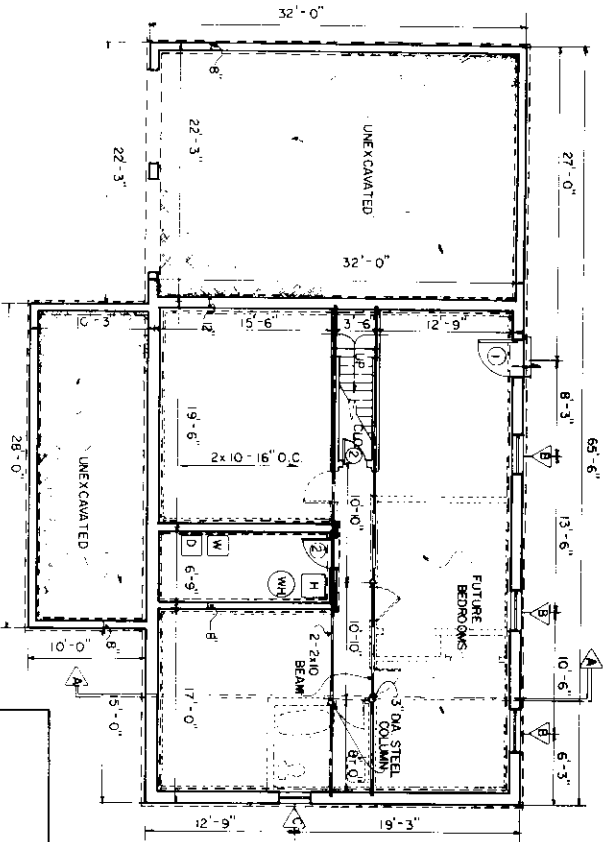


FOUNDATION PLAN

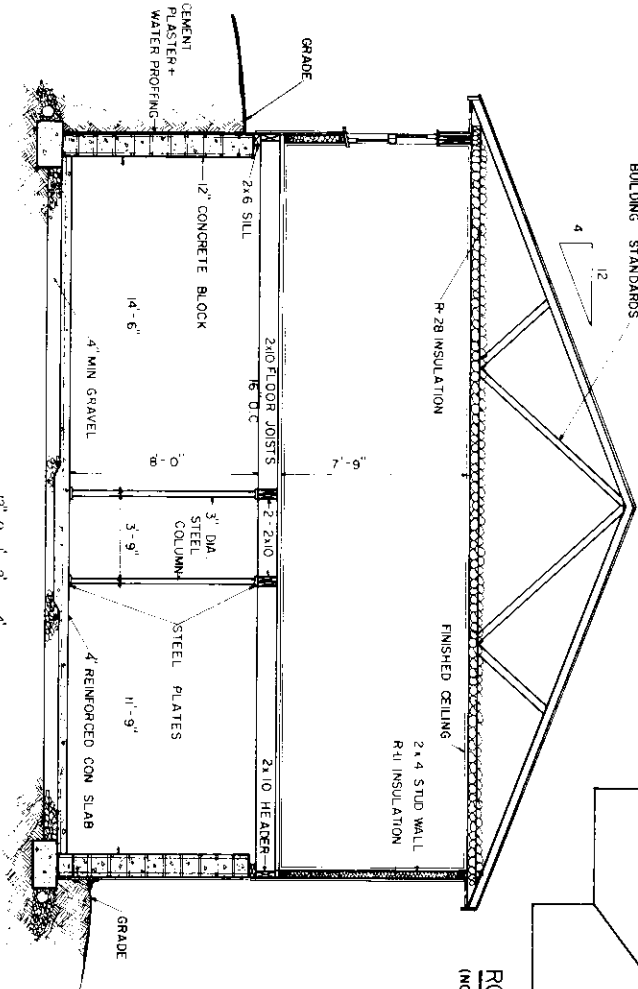


SECTION AA

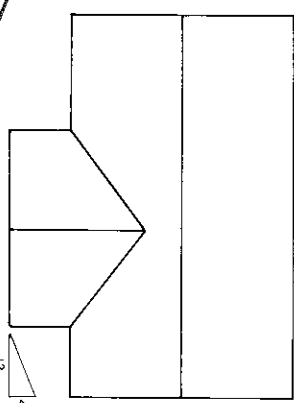

ROOF PLAN
(NOT TO SCALE)

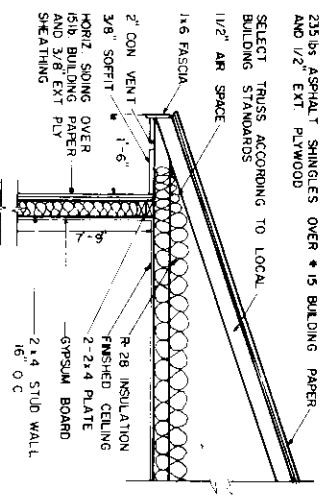

TYPICAL WALL SECTION

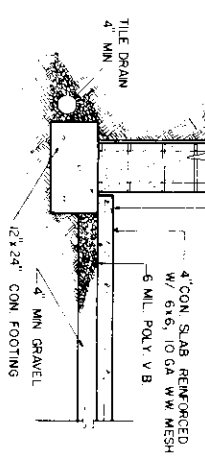

TYPICAL WALL SECTION

CONSTRUCTION CHECK LIST

1. CHECK LOCAL BUILDING CODE AND LOAN COMPANY CRITERIA.
2. ADEQUATELY NAIL AND ANCHOR JOISTS.
3. SHEATH GABLES WITH 1/2" PLYWOOD OR HIGH DENSITY FIBERBOARD OR USE DIAGONAL BRACING.
4. USE EXTERIOR GRADED PLYWOOD WHENEVER IT MAY BE SETTLE DURING OR AFTER CONSTRUCTION.
5. PRESSURE TREAT ALL WOOD WITH GROUND CONTACT AND PROVIDE OTHER NEEDED TREATMENT CONTROL.
6. R VAUERS DEPEND ON LOCAL CLIMATE AND PEST CONTROL.
7. PROVIDE 1 SQ. FT. OF ACTIVE VENT OPENINGS FOR EACH 150 SQ. FT. OF CEILING.
8. VENTILATE ALL OPENINGS AND JOINTS.
9. DOUBLE JOISTS UNDER TRUSS AND OTHER HEAVY LOADS.

COOPERATIVE EXTENSION SERVICE
AGRICULTURE AND HOME ECONOMICS

UNITED STATES DEPARTMENT OF AGRICULTURE COOPERATING

3 BEDROOM FARMHOUSE

USDA 85 7260 SHEET 3 OF 3