




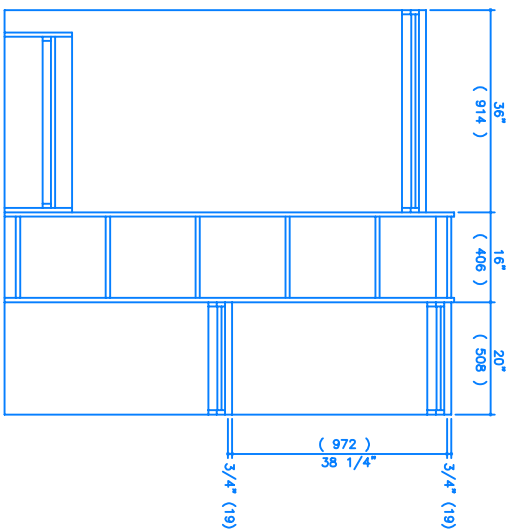

6' ORGANIZER

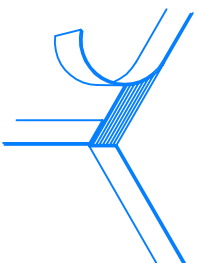

EDGE TAPE ILLUSTRATION 2

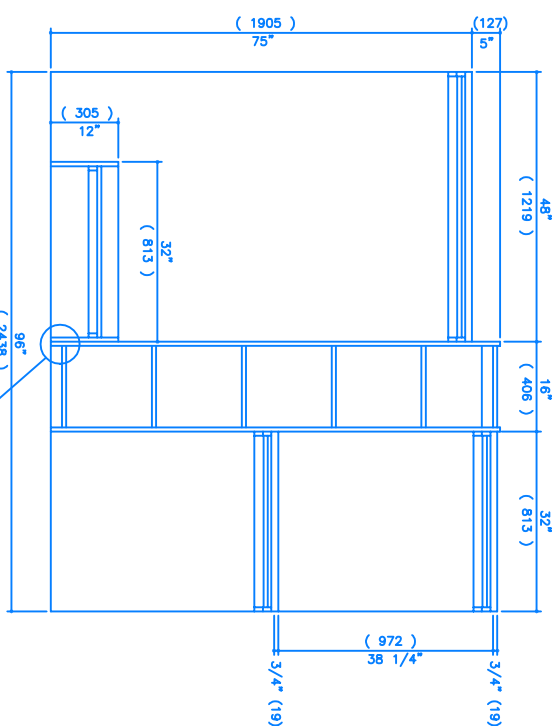

- 5) To locate your closet shelves measure up from floor to bottom of shelf. Using a level draw a faint line to indicate where shelf supports are mounted. Before mounting supports ensure your measurements are correct. Place two pieces Q on the ends of pieces K and J and test for fit within the closet, on either side of the middle shelf assembly. It is important that there is a tight fit. Similarly test pieces A and B. Trim the pieces if necessary, however it is better to be too long than too short! Place the dowel between pieces Q and then glue and nail pieces Q to K, as shown (Fig 9) with 1 1/2" finishing nails. Repeat same steps with Q and J (Fig 9). Before mounting IK or JU by locating studs in wall and mark stud locations on pieces Q, K and J. Pre-drill 1/32" holes with four nails, using a 1/8" drill bit. These holes should be 3/4" from the rear of piece Q and 3/4" from either side of the dowel. (On drill 1/4" hole, the nail framing is located). Countersink the holes with a 1/4" countersink. The countersink should be 1/4" deep. The pieces will be 1/4" thick. Hold up the pieces to the wall, check the fit. The screw heads will be flush. Hold up outside the closet and drill into the wall through the wall insert on expansion shield, hammering it in. It is better if you can locate your screws in the wall framing. Mark this IK assembly with an X somewhere so you do not get it mixed up with the other similar assembly. Repeat this procedure with the bottom IK shelf and also with the J shelf. Glue and nail the doorstop R to the shelf A with 1 1/4" finishing nails. Keep the top edges of R and A flush. Repeat for the other AO shelf and also the BP shelf. Nail the two AO shelves onto the KI assembly with 1 1/4" finishing nails. Similarly nail the BP shelf to the JU assembly. Set the nails with a nail set.
- 6) Screw the shelf into the closet with 1 1/4" threaded screws. Fill nail holes and screw holes with wood putty. Sand and paint.

Hardwood veneered plywood works best for this project, although our project was built using knotty pine veneer. If you wish, good one or good two sides plywood is quite adequate but will require a bit more filling and then some painting. Vinyl shelf edging works well for a project such as this for the small shelves, one 8" length should be adequate. See illustration 2 for iron-on edge tape installation.

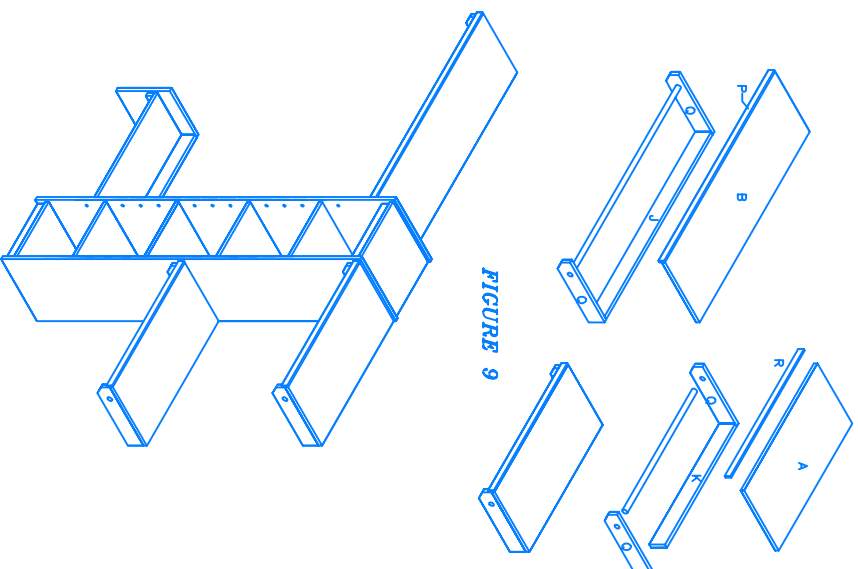


FIGURE 9

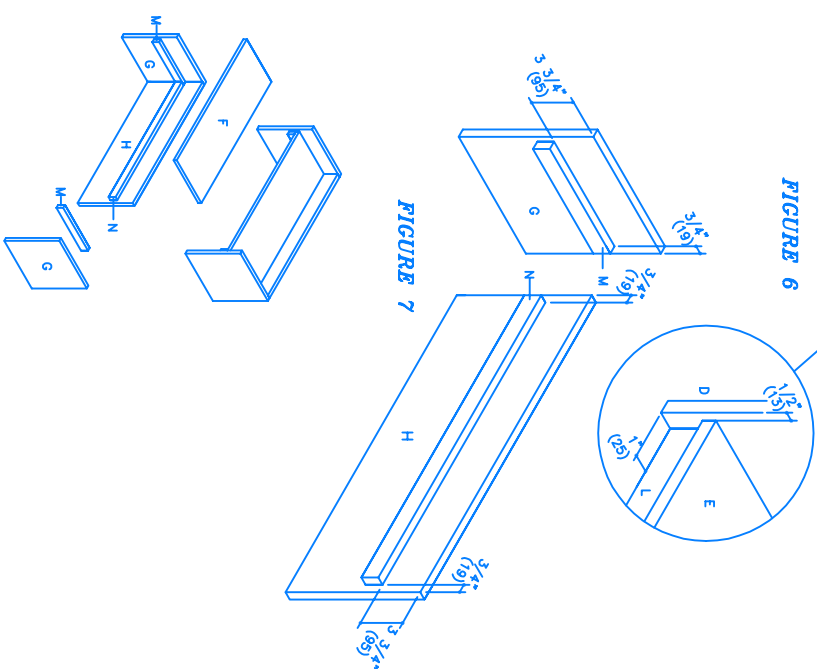


FIGURE 6

FIGURE 7

FIGURE 8

FINISHED PROJECT