


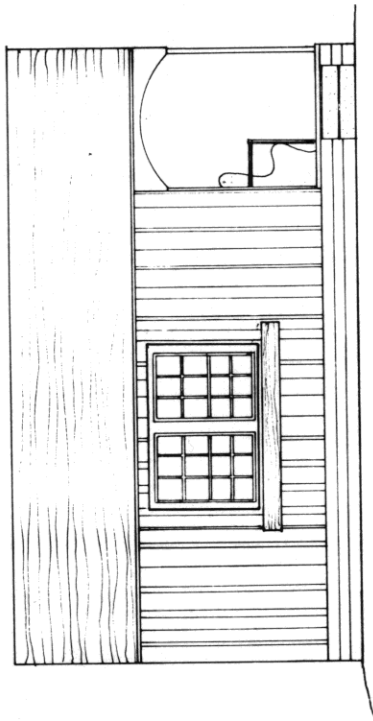
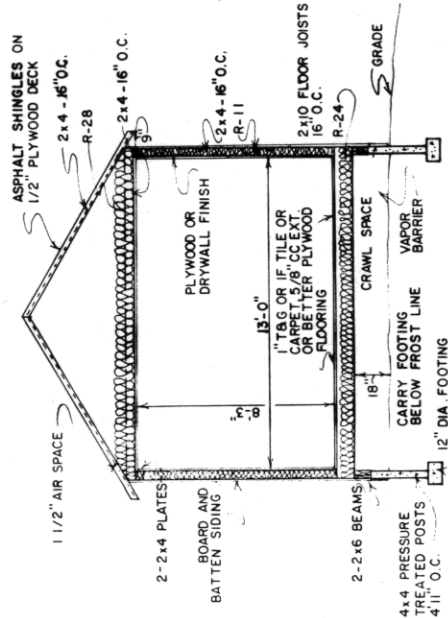





FRONT ELEVATION

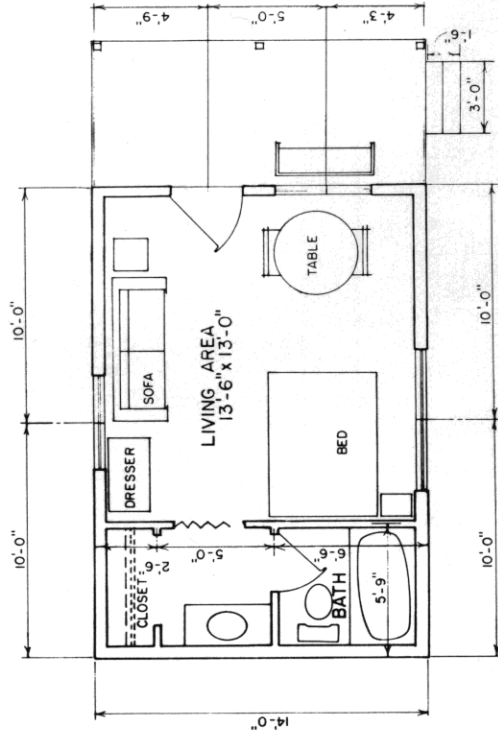


CROSS SECTION




FLOOR PLAN



PERSPECTIVE (NO SCALE)

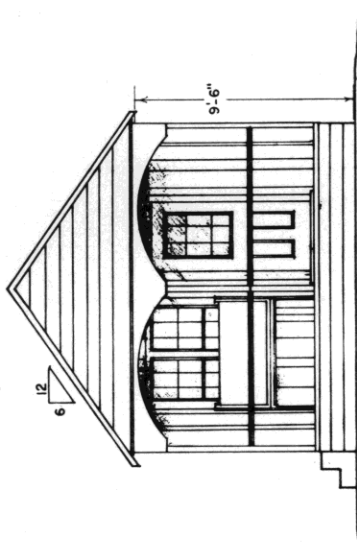

SIDE ELEVATION



CONSTRUCTION CHECK LIST

1. CHECK LOCAL BUILDING CODES CRITERIA.
2. ADEQUATELY NAIL AND ANCHOR JOINTS.
3. USE EXTERIOR GLUED PLYWOOD WHEREVER IT MAY BE WETTED DURING OR AFTER CONSTRUCTION.
4. PRESSURE TREAT ALL WOOD WITH GROUND CONTACT AND PROVIDE OTHER NEEDED TERMITE CONTROL.
5. PROVIDE 150 FT. OF ATTIC VENT OPENINGS FOR EACH 150 SQ. FT. OF CEILING. PROVIDE SAME AMOUNT OF VENTILATION FOR THE CRAWL SPACE.
6. WEATHERIZE ALL OPENINGS AND JOINTS.

ALTERNATIVE:

7. AN 8" THICK MASONRY PERIMETER FOUNDATION COULD BE USED IN PLACE OF THE POST AND BEAM CONSTRUCTION OR A THICKENED EDGE SLAB CAN BE USED BUT EDGE INSULATION SHOULD BE PROVIDED AROUND PERIMETER OF SLAB TO REDUCE HEAT LOSS AND REDUCE POTENTIAL FROST UPHEAVAL PROBLEM.

A THROUGH-THE-WALL ELECTRIC HEAT/ A/C UNIT IS SUGGESTED IF ATTIC SPACE IS USED. SUGGESTER LOCATE SPACE HEAT/ BATH FURNACE HEATER. LOCATE UNDER VANITY COUNTER, AT ONE END OF CLOSET OR IN ADD-ON SHED SHELTER AT REAR.

COOPERATIVE EXTENSION SERVICE
AGRICULTURE AND HOME ECONOMICS

UNITED STATES DEPARTMENT OF AGRICULTURE COOPERATING

DETACHED GUEST HOUSE
WITHOUT KITCHEN

USDA 86 5186 SHEET 1 OF 1

REV. 86